

Basic Principle

De Wiki

Aller à : [navigation](#), [rechercher](#)

[Basic Principle](#)

PSIMU proposed a **Java** interface

Most of the objects to pass as input data are [[PATRIUS](#)] ones. Some of them are specific to **PSIMU** or [[GENOPUS](#)] but, in that case, most of the time, it is due to the fact that these objects are not yet included in the used [[PATRIUS](#)] version: their name will then start by “*Custom...*”.

So, to use this **Java** interface, the developer will have to:

1. Initialize [[Patrius Dataset](#)].
2. Create a **PSIMU** object using its available constructor.
3. Calling for the propagation in master or slave mode.
4. Calling for “*getter*” methods to extract after the propagation all useful information.

For the first point, there are two possibilities:

- Calling directly the [[Patrius Dataset](#)] method:

```
// Patrius Dataset initialization  
PatriusDataset.addResourcesFromPatriusDataset() ;
```

- Or calling a specific **PSIMU** method allowing to manage both [[Patrius Dataset](#)] included Inside the **PSIMU** jar and local data (see [here](#)):

```
// Patrius data set initialization  
final String addDataName =  
AppPSimuConfigurationProperties.getInstance().getAdditionalPatriusFolder();  
AppPSimuConfigurationProperties.iniPatriusDataset(addDataName);
```

Récupérée de « http://psimu.cnes.fr/index.php?title=Basic_Principle&oldid=930 »

Menu de navigation

Outils personnels

- [3.143.228.40](#)
- [Discussion avec cette adresse IP](#)
- [Créer un compte](#)
- [Se connecter](#)

Espaces de noms

- [Page](#)
- [Discussion](#)

Variantes

Affichages

- [Lire](#)
- [Voir le texte source](#)
- [Historique](#)
- [Exporter en PDF](#)

Plus

Rechercher

PSIMU

- [Welcome](#)
- [Quick start](#)
- [News](#)

GUI Mode

- [Overall presentation](#)
- [Initial Orbit](#)
- [Earth features](#)
- [Vehicle](#)
- [Forces](#)
- [Maneuvers](#)
- [Attitude](#)
- [Integrator](#)
- [Events](#)
- [Output](#)
- [Console](#)

Batch mode

- [How to call it](#)

Java interface

- [Basic principle](#)
- [Data initialization](#)
- [Propagation](#)
- [Printing results](#)
- [Customize output variables](#)

Evolutions

- [Main differences between V11.7.3 and V11.7.4](#)
- [Main differences between V11.7.2 and V11.7.3](#)
- [Main differences between V11.7.1 and V11.7.2](#)
- [Main differences between V11.6.2 and V11.7.1](#)
- [Main differences between V11.5 and V11.6.2](#)
- [Main differences between V11.4.1 and V11.5](#)
- [Main differences between V11.4 and V11.4.1](#)
- [Main differences between V11.3 and V11.4](#)
- [Main differences between V11.2 and V11.3](#)
- [Main differences between V11.1 and V11.2](#)
- [Main differences between V11.0 and V11.1](#)

Training

- [Tutorials package for V11.7.x](#)
- [Tutorials package for V11.6](#)
- [Tutorials package for V11.5](#)
- [Tutorials package for V11.4](#)
- [Tutorials package for V11.3](#)
- [Tutorials package for V11.2](#)
- [Tutorials package for V11.0](#)

Links

- [CNES freeware server](#)

Outils

- [Pages liées](#)
- [Suivi des pages liées](#)
- [Pages spéciales](#)
- [Adresse de cette version](#)

- [Information sur la page](#)

- [Citer cette page](#)

- Dernière modification de cette page le 16 décembre 2020 à 11:26.

- [Politique de confidentialité](#)

- [À propos de Wiki](#)

- [Avertissements](#)

