

Basic Principle

De Psimu

[Aller à la navigation](#) [Aller à la recherche](#)

La version imprimable n'est plus prise en charge et peut comporter des erreurs de génération.
Veuillez mettre à jour les signets de votre navigateur et utiliser à la place la fonction d'impression par défaut de celui-ci.

PSIMU proposed a **Java** interface

Most of the objects to pass as input data are **PATRIUS** ones. Some of them are specific to **PSIMU** or **GENOPUS** but, in that case, most of the time, it is due to the fact that these objects are not yet included in the used **PATRIUS** version: their name will then start by "Custom...".

So, to use this **Java** interface, the developer will have to:

1. Initialize [Patrius Dataset](#).
2. Create a **PSIMU** object using its available constructor.
3. Calling for the propagation in master or slave mode.
4. Calling for "getter" methods to extract after the propagation all useful information.

For the first point, there are two possibilities:

- Calling directly the [Patrius Dataset](#) method:

```
// Patrius Dataset initialization  
PatriusDataset.addResourcesFromPatriusDataset() ;
```

- Or calling a specific **PSIMU** method allowing to manage both [Patrius Dataset](#) included Inside the **PSIMU** jar and local data (see [here](#)):

```
// Patrius data set initialization  
final String addDataName =  
AppPSimuConfigurationProperties.getInstance().getAdditionalPatriusFolder();  
AppPSimuConfigurationProperties.iniPatriusDataset(addDataName);
```

Récupérée de « http://psimu.cnes.fr/index.php?title=Basic_Principle&oldid=1173 »

Menu de navigation

Outils personnels

- [Se connecter](#)

Espaces de noms

- [Page](#)
- [Discussion](#)

français

Affichages

- [Lire](#)
- [Voir le texte source](#)
- [Voir l'historique](#)
- [Exporter en PDF](#)

Plus

Rechercher

PSIMU

- [Welcome](#)
- [Quick start](#)
- [News](#)

GUI Mode

- [Overall presentation](#)
- [Initial Orbit](#)
- [Earth features](#)
- [Vehicle](#)
- [Forces](#)
- [Maneuvers](#)
- [Attitude](#)
- [Integrator](#)
- [Events](#)
- [Output](#)
- [Console](#)

Batch mode

- [How to call it](#)

Java interface

- [Basic principle](#)
- [Data initialization](#)
- [Propagation](#)
- [Printing results](#)
- [Customize output variables](#)

Evolutions

- [Main differences between V11.7.4 and V11.8](#)
- [Main differences between V11.7.3 and V11.7.4](#)
- [Main differences between V11.7.2 and V11.7.3](#)
- [Main differences between V11.7.1 and V11.7.2](#)
- [Main differences between V11.6.2 and V11.7.1](#)
- [Main differences between V11.5 and V11.6.2](#)
- [Main differences between V11.4.1 and V11.5](#)
- [Main differences between V11.4 and V11.4.1](#)
- [Main differences between V11.3 and V11.4](#)
- [Main differences between V11.2 and V11.3](#)
- [Main differences between V11.1 and V11.2](#)
- [Main differences between V11.0 and V11.1](#)

Training

- [Tutorials package for V11.7.x](#)
- [Tutorials package for V11.6](#)
- [Tutorials package for V11.5](#)
- [Tutorials package for V11.4](#)
- [Tutorials package for V11.3](#)
- [Tutorials package for V11.2](#)
- [Tutorials package for V11.0](#)

Links

- [CNES freeware server](#)

Utils

- [Pages liées](#)
- [Suivi des pages liées](#)
- [Pages spéciales](#)
- [Lien permanent](#)
- [Informations sur la page](#)
- [Parcourir les propriétés](#)
- [Citer cette page](#)

- La dernière modification de cette page a été faite le 20 juin 2025 à 12:17.
- Cette page a été consultée 3 225 fois.
- [Politique de confidentialité](#)
- [À propos de Psimu](#)
- [Avertissements](#)

